

CaviBlaster 1228-G Oil Change

Engine Oil Change

1. Remove top Oil cap from the engine
2. Set container to receive the used oil, under the engine
3. Open small hose at the foot of the engine
4. Let the engine oil drop, for about 20 minutes
5. Close small hose
6. Put in one **¼ Oil SAE 10W-30**
7. Take measure of oil in engine
8. Place oil cap again



Pump Oil Change

1. Set the unit in an inclined position, to easy drain the oil pump
2. Open oil cap from top of the pump
3. Set container to receive the used oil, under the pump
4. Remove oil cap from bottom of the pump
5. Let the oil drop for 20 Minutes
6. Close bottom cap
7. Set unit in a flat position
8. Put in one **¼ Non-Detergent SAE 30 ISO100**
9. Place oil cap again and check the level in the pump, the middle is perfect.

